


CO-730 - IB (English)

Size: 165 x 180 mm (folded: 82.5 x 60 mm)

Color: 1C + 1C (Black)

Material: 80gsm wood free paper

Aug. 05, 2022

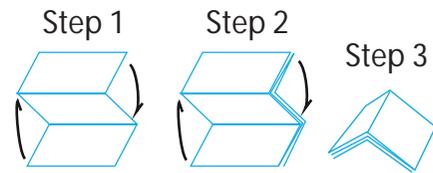

Important Message to Customers

Thank you for purchasing one of our many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.

GENERAL BATTERY PRECAUTIONS

Never use or charge a battery if it appears to be leaking, or in any way abnormal.

Avoid charging battery when the temperature is not within 5°C - 35°C (41° - 95° Fahrenheit).

Never expose a battery to any liquid, or to excessive heat such as direct sunlight or fire.

Never leave in an unventilated vehicle where excessive internal temperatures may be encountered.

Always keep batteries out of the reach of infants and small children.

Always charge lithium devices on a non-flammable surface - wooden tables/ carpeted floors are not recommended charging surfaces.

If the unit is to be unused for an extended period of time, such as a month or longer, charge the unit fully before storage.

Always use a UL/ETL certified charging adapter (not included), and the supplied USB charging cable.

WARNING/DISPOSAL OF UNIT

Do NOT attempt to change or disassemble the built-in battery. Doing so will void the warranty and could cause personal injury and damage to your device.

Do not dispose of batteries in the household trash or fire.

Always dispose of used batteries/electronics in accordance with the prevailing community regulations.

To find a drop-off location near you, visit www.call2recycle.com

Maintenance

It is important to keep the unit as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the unit.

Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please visit our website: www.kiddesigns.com

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Limited 1 Year Warranty Information

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please contact Customer Service at kiddesigns.com/support to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.


This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will KIDdesigns or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your KIDdesigns product.

Questions? Visit www.kiddesigns.com
©2022 All Rights Reserved.

Charging the Battery


ATTENTION: Charging the battery should only be performed by an adult. Follow these instructions:

1. Connect the larger plug of the included USB-C charging cable to the powered USB port of a computer or a USB/AC adapter.
2. Connect the smaller plug to the USB-C charging port on the back of the unit.
3. The white LED ring on the front cabinet flashes and a voice prompt will sound "battery low" when the unit needs to be charged. The charging LED (located on back of unit) glows solid red while charging, and glows solid blue once fully charged.

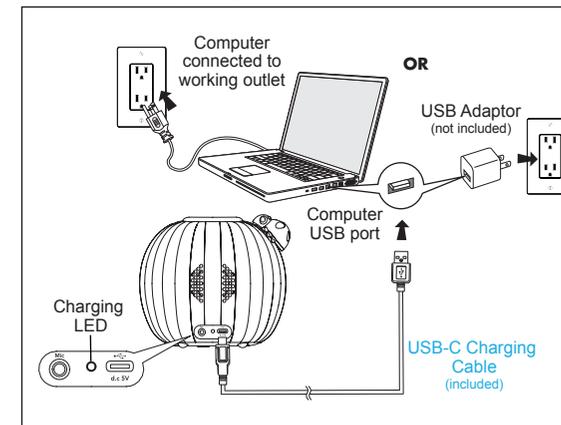


Demo Mode

 This unit ships in demo mode for in-store demonstration purposes. When you are ready to play, slide the ON/OFF/DEMO Switch located on the bottom of the unit to ON.



Controls

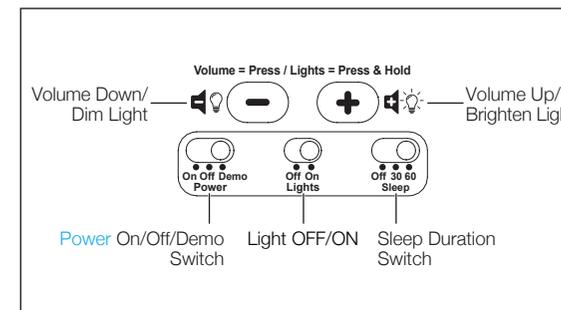

How to Use Musical Activators:

The unit comes with musical activators - each activator plays a different song! To hear a song, place an activator on the magnetic platform on the top of the unit.

The song will automatically play twice in a row as long as the activator stays on top. If you remove the activator, the song stops.

Once an activator plays a song, it can be accessed again. Cycle through the built-in songs using the Ladybug button when the Sleep Timer is off.

Note: Musical Activators will play a song when placed on the unit, whether the Sleep Timer is ON or OFF. (Additional activators sold separately - each new activator will add another song to the unit).

 
Ladybug Button:

If the Sleep Timer is ON, (set to 30 or 60 minutes) press the Ladybug to start the Sleep Timer. Press the Ladybug again to cycle through all 6 sleep melodies and sounds.

If the Sleep Timer is OFF, press the Ladybug to hear songs, even if no activator is present. If an activator is present, press the Ladybug to stop and restart the song for that activator.

Sleep Timer:

Set a sleep timer to 30 or 60 minutes, and the unit will play soothing sounds and lullabies for the selected time. Slide the right switch on the bottom of the unit to 30 or 60. Then, press the Ladybug to cycle through 6 tracks (3 soothing sounds, and 3 lullabies).




Lose an Activator? No problem

Slide the right switch on the bottom of the unit to Sleep Mode Off. Press the Ladybug to cycle through the songs from the activators. Once an activator has been used, that song will remain in the unit, and can be accessed this way.


Light Mode:

 Slide the Light Mode switch located on the bottom of the unit to ON or OFF. Press and hold the - and + buttons to adjust the brightness.



Using the Microphone:

Connect the included wired microphone to the Mic port on the back of the unit to sing along! A microphone stand is included to hold the microphone on top of the unit. The microphone stand will play a sound effect when placed on top of the unit, but does not play a song.

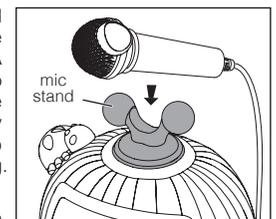

Note: Unplug the microphone from the unit while using Sleep Mode to avoid any feedback.