

## Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

## A Consumer Guide to Product Safety

# IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

**QUESTIONS? Visit [www.ekids.com](http://www.ekids.com)**

## Limited 90-Day Warranty Information

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$15.00. Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of eKids, for the sum of \$10.00 (\$15.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

**Consumer Repair Department**  
eKids  
1330 Goodyear Drive  
El Paso, TX 79936-6420

Disclaimer of Warranty


NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

**Questions? Visit [www.ekids.com](http://www.ekids.com)**  
**For any other questions: 1-800-288-2792 Toll Free**  
**©2012 SDI Technologies, Inc. All Rights Reserved.**  
**iHome is a registered trademark of SDI Technologies Inc.,**  
**used under license.**


**© The Muppets Studio, LLC. All Rights Reserved.**  
**© Disney All Rights Reserved**  
**Visit the Disney website at [DisneyXD.com](http://DisneyXD.com)**

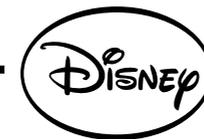

# iHome

DM-M79

Portable Rechargeable  
**MINI SPEAKERS**  
for iPhone, iPod, Mac and PC

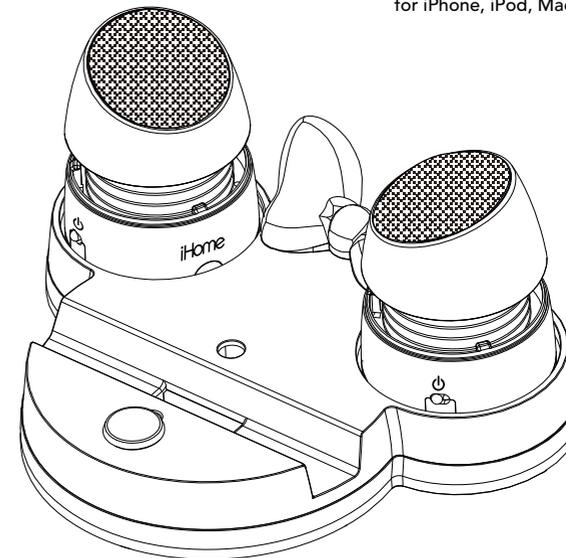

**QUESTIONS? Visit [www.ekids.com](http://www.ekids.com)**

### FCC Information

**This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### IMPORTANT

#### Read before proceeding

If you have any questions regarding the operation or use of this product, please visit [www.ekids.com](http://www.ekids.com) to view answers to frequently asked questions.

To learn more about this and other iHome products, please visit us online at [www.ihomeaudio.com](http://www.ihomeaudio.com)

## Setting Up and Using the DMM79

1. Remove stand, speakers and cables from packaging.
2. Locate the USB/mini USB/audio cable.
3. Pry open cable clip on cables to free up/ release cables.
4. Locate the two mini USB cable ends and grip them together in one hand between thumb and forefinger on the cable about 4 inches below the plugs. (ref to Figure 1)
5. Turn stand upside down.
6. Place the mini USB cable in the channel (located on the back of the stand) with the mini USB plugs extending about four inches out of the stand and wrap the remaining cable loop around the cable wrapping tree and press the cable into the cable locking notch on the cable wrapping tree. Leave the standard USB plug cable and audio cable loose outside. (ref to Figure 2)
7. Locate the audio cable and wrap around the cable tree a few times. (ref to Figure 3)
  - a) If headphone jack on your audio device is on the bottom of the device, insert the audio cable plug through the audio cable slot towards the front of the stand. (ref to Figure 4)
  - b) If headphone jack on your audio device is located on its top or side, insert audio cable plug through hole in center of stand. (ref to Figure 5)
8. Turn stand over
9. If closed, gently twist speakers slightly to the right to open. Place speakers in the stand (L speaker on the left, R speaker on the right) with the mini USB port facing the cable notch on the back of each speaker platform area.
10. Connect a mini USB plug to the mini USB port on each speaker. (ref to Figure 6)
11. Connect the standard USB cable to a working USB charging port. Allow to charge for up to 3 hours for first time use. The light on the speaker will turn red while charging and turn blue when fully charged. When the blue power light dims or the sound becomes distorted, it's time to recharge the batteries. When done charging, you may wish to store the USB cable back under the DMM79 base. You may need to disconnect the speakers first to do so, then re-connect them. (ref to Figure 7)

**NOTE: You can listen to the speakers while they are charging.**

12. Connect the audio cable to the headphone or line out jack of your audio device and place audio device in the cradle on the stand. Press the device lever to hold device firmly in cradle. (ref to Figure 8)
13. Slide power switch on each speaker to ON position. The blue power light will come on.
14. Turn on your audio device and place in play mode. Adjust volume on audio device.

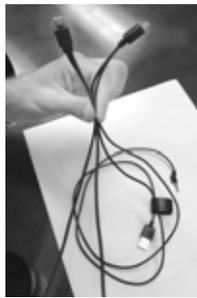


Figure 1

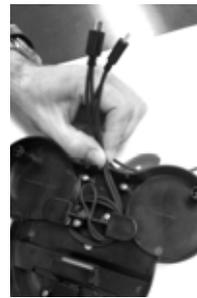


Figure 2



Figure 3



Figure 4

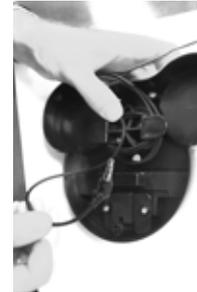


Figure 5



Figure 6



Figure 7



Figure 8

To unlock and expand each speaker, grip the top and bottom and give a small twist counter-clockwise. DO NOT pull hard once open, as the built in spring will automatically extend the speaker to its proper position.

To compress and lock speaker, line up lock tab on speaker top with lock/unlock icon on base. Press speaker down from the top and twist clockwise to lock in place.

The speakers have magnetic bases. They can be joined together for storage. To separate the speakers gently pull them apart.

**Note: the larger USB plug is used for charging only, not for audio.**

**NOTE: This product has magnets in the base of each speaker. To avoid interference or possible damage, do not place speakers directly on electronic devices such as computers or monitors.**

