

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warning.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug the apparatus during lightning storms or when unused for long periods operate during intended use.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way. Examples of damage include: Power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. No naked flame sources, such as lighted candles, should be placed on the apparatus.
15. Attention should be drawn to the environmental aspects of battery disposal.
16. The use of apparatus in tropical and/or moderate climates.
17. CAUTION-Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

## CAUTION:

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



**CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.**




This lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## DANGER!

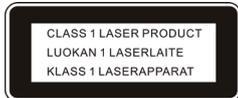

This Compact disc player is classified as a Class 1 LASER PRODUCT. THE CLASS 1 LASER PRODUCT label is located on the rear exterior.

© 2020 eKids, LLC  
PO Box 2228  
BELFAST, BT5 9GD  
contact@support.ekids.com



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

## Getting Started

### ACCESSORIES:

Instruction Booklet: 1pc  
AC Cord: 1 pc

### POWER SOURCE

This unit is designed to be operated on AC or DC power.

### AC OPERATION

Plug the tail of AC power cord into AC socket on the unit and the plug into household AC outlet.

### DC OPERATION

Open the BATTERY COMPARTMENT DOOR. Install 6 pcs UM-2/C size batteries (not included) into compartment. Please follow correct polarities as indicated. Disconnect the power supply cable from the back of unit.

### For the Best Possible Performance


- Only use the recommended/supplied batteries or equivalent.
- Rechargeable batteries are to be removed from the toy before being charged.
- The supply terminals are not to be short-circuited.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.
- Do not dispose of batteries in fire; batteries may leak or explode.
- Batteries should be replaced by an adult.
- Remove all packaging before giving to your child.

# CD Boombox

Model: 430 Series

### POWER REQUIREMENTS:

Power Source: AC230V ~ 50Hz  
DC 9V 1.5V UM-2/C x 6pcs (batteries not included)

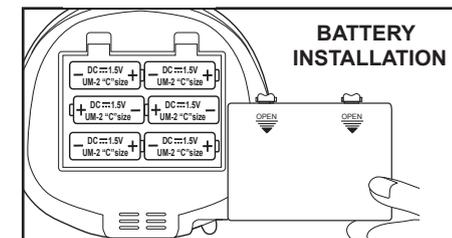

## BASIC FUNCTION

### SWITCHING ON THE UNIT

After connecting the power, press the  $\phi$ /SOURCE button to turn the unit ON or OFF.

**NOTE:** In CD/AUX/BLUETOOTH mode, when the unit is not providing the main function for 15 minutes, the unit will automatically switch into standby mode. Press the  $\phi$ /SOURCE button to turn on the unit again.

Please note that low volume setting in the audio source may be recognized as "no audio signal", this will affect the capability of signal detection from the device and can also originate an automatic switch into standby mode. If this happens please reactivate the audio signal transmission or increase the volume setting on the audio source player in order to resume playback.

**Electrostatic Discharge hints** - The unit may reset or may not reset to normal operation mode due to electrostatic discharge, just switch it off and reconnect again.

### ADJUSTING VOLUME

Press the VOL.+ or VOL.- button on unit to increase or decrease volume.

## BLUETOOTH OPERATION

1. Press the  $\phi$ /SOURCE button on unit to select Bluetooth mode, the LCD will display "bt".
  2. Turn on the Bluetooth function on your device, and select "BT-430" to connect. Input the password '0000' if required. The display will show "bt". Press **PLAY/PAUSE/REPEAT/PAIR** button to start playback.
  3. Press the VOL.+ or VOL.- button on unit or adjust the volume on the external device to your desired level.
  4. Press **◀▶** on unit to choose the desired track.
  5. To stop playback, press **PLAY/PAUSE/REPEAT/PAIR** button on unit.
  6. Press and hold **PLAY/PAUSE/REPEAT/PAIR** button to disconnect Bluetooth.
- Note: The Bluetooth works best within 10 meters in open air.

## CD OPERATION

### Discs for Playback

This system can playback all digital audio CD, finalized digital audio CD-Recordable (CD-R) discs, finalized digital audio CD-Rewritable (CD-RW) discs.

### LOADING A DISC

1. Press the  $\phi$ /SOURCE button on unit to select "CD" mode.
2. Push to open CD door, "OP" will be shown on the display.
3. Place an audio CD into the tray with the front side facing up.
4. Close the CD door, the display will show a flashing "- -", then the playback will start from the first track.
5. To remove the CD, press **STOP/PROG** button to stop, then open the CD compartment lid. Hold the CD by its edges, and take it out carefully.

### Note:

1. Make sure the disc is stopped before opening the CD DOOR.
2. To ensure good system performance, wait until the unit completely reads the disc before proceeding.
3. If no disc loaded into the tray, or the disc is unreadable, the display will show "NO".

### PLAYING A DISC


1. The playback starts from track 1, Press the **PLAY/PAUSE/REPEAT/PAIR** button to pause playback, the **▶** indicator and the current track will flash on the display. To resume playback, press the **PLAY/PAUSE/REPEAT/PAIR** button again.
2. To stop playback, press the **STOP/PROG** button, the total number of tracks appears on the display.

### SELECTING A DESIRED TRACK/PASSAGE

#### To select a desired track

Press the **◀▶** or **▶▶** button on unit while in stop mode, until the desired track appears on the display. Then press the **PLAY/PAUSE/REPEAT/PAIR** button to play.

## CONTROLS

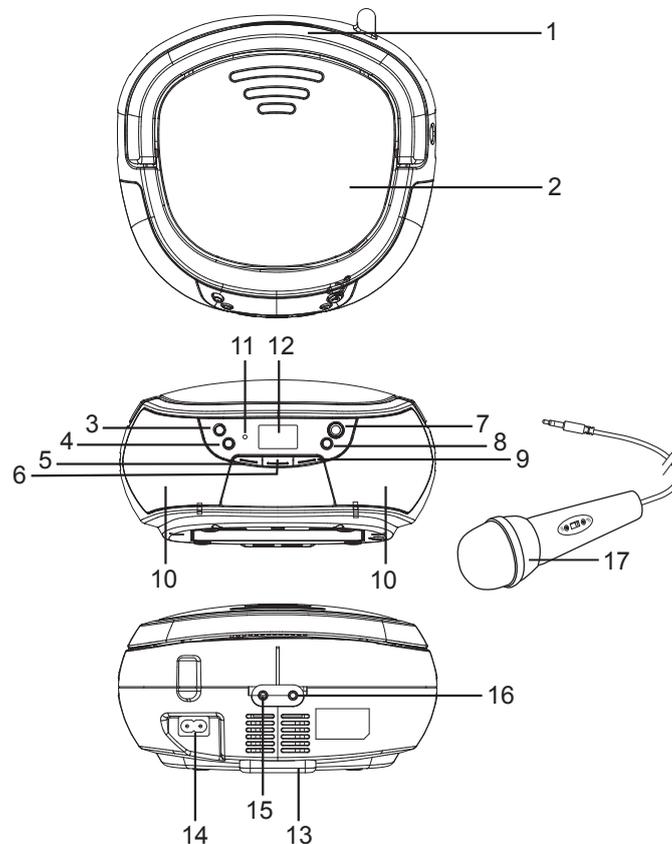

- |                                  |                         |
|----------------------------------|-------------------------|
| 1. HANDLE                        | 10. SPEAKERS            |
| 2. CD COMPARTMENT                | 11. STB INDICATOR       |
| 3. NEXT/FAST FORWARD BUTTON      | 12. LCD DISPLAY         |
| 4. PREV/FAST BACKWARD BUTTON     | 13. BATTERY COMPARTMENT |
| 5. VOL. - BUTTON                 | 14. AC SOCKET           |
| 6. $\phi$ /SOURCE BUTTON         | 15. AUX-IN JACK         |
| 7. PLAY/PAUSE/REPEAT/PAIR BUTTON | 16. MIC JACK            |
| 8. STOP/PROG BUTTON              | 17. MICROPHONE          |
| 9. VOL.+ BUTTON                  |                         |

### To search for a particular passage during playback (track scanning at high speed)

Press and hold the **◀▶** or **▶▶** button on unit to scan the current playing track at high speed until desired point (passage) appears, then release the button for normal playback mode. Playback will start again from this point.

### PROGRAMMING TRACKS

Programming tracks is possible when playback is stopped. Up to 20 tracks of a CD can be stored in the memory in any order.

1. In stop mode, press and hold the **STOP/PROG** button. The unit enters program setting, the "PROGRAM" indicator will flash on the display and show **P01**.
2. Press the **◀▶** or **▶▶** button to select the first desired track to be programmed. (example: track 2)
3. Press and hold the **STOP/PROG** button on unit to enter. The display would flash **PROGRAM** and show **P02**.
4. Repeat steps 2 & 3 to store other desired tracks until all tracks programmed.
5. Press the **PLAY/PAUSE/REPEAT/PAIR** button on unit to start playback from the first programmed track.
6. Press the **STOP/PROG** button on unit to stop program playback. To clear the program, you may press **STOP/PROG** button on unit when the disc stopped and open the CD compartment lid, the program will be erased.

### REPEAT PLAY

You can play one track or all tracks on the disc repeatedly.

#### To Repeat a Single Track

1. Press and hold **PLAY/PAUSE/REPEAT/PAIR** button during play, the display will show a flash "REPEAT" indicator and the current track will be played over and over again.
2. To cancel repeat play, press and hold the **PLAY/PAUSE/REPEAT/PAIR** button repeatedly until "REPEAT" disappears from the display.

#### To repeat all the Tracks

1. Press and hold **PLAY/PAUSE/REPEAT/PAIR** button while in Repeat Single Track mode until the "REPEAT" indicator shows steadily on the display, all tracks on the disc will be played over and over again.
2. To cancel repeat play, press and hold the **PLAY/PAUSE/REPEAT/PAIR** button repeatedly until "REPEAT" disappears from the display.

### RANDOM PLAY

Press and hold the **PLAY/PAUSE/REPEAT/PAIR** button repeatedly till the "RAN" shows steadily on the display, the random play will start from next track automatically, until all tracks are played over and then it will stop. To cancel, press and hold the **PLAY/PAUSE/REPEAT/PAIR** button until the "RAN" disappears from the display.

### AUX-IN OPERATION

1. Press the  $\phi$ /SOURCE button to select "AUX" mode.
2. Insert one end of a AUX line plug into the AUX IN jack (3.5mm) on the unit, and the other end to the headphone jack of your music device to amplify music.
3. Control play/pause and navigate tracks using your music device.
4. Adjust the volume on the unit or on the device to your desired level.

### MICROPHONE OPERATION

This unit provides one 3.5mm Mic Jack for Karaoke function. The microphone is available in all modes. Connect a 3.5mm microphone to the mic jack, then turn on the microphone.