

## FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

All stories are from *Disney's 5-Minute Princess Stories*,  
© 2001 by Disney Enterprises, Inc., Disney Press

## Limited One-Year Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$6.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$6.00.
4. Send the unit prepaid to the Factory Service Center listed below.

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:  
Consumer Repair Department  
KIDdesigns, Inc.  
1330 Goodyear Dr.  
El Paso, TX 79936-6420

© Disney Visit the Disney website at [DisneyPrincess.com](http://DisneyPrincess.com)

Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024  
eKids is a wholly owned subsidiary of KidDesigns, Inc.,  
1299 Main Street Rahway NJ 07065

Model DP-180

## Magical Princess Storyteller



### Important Message to Customers

Thank you for purchasing one of Disney/Princess's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain to the child the safe and proper way to use this product, and to help give it the long-lasting life that Disney/Princess's products are designed for.

## Getting Started

### Installing the Batteries

**Note: Batteries should always be installed by an adult.**

- 1 Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
- 2 Insert 3 AAA (R03) batteries into each Walkie Talkie with + and - terminals as indicated in the compartment.
- 3 Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.


**WARNING: DO NOT DISPOSE OF BATTERIES IN HOUSEHOLD TRASH. CONSULT LOCAL REGULATIONS FOR PROPER BATTERY DISPOSAL.**

#### For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove the rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.

### Remove Demo Tab

- The unit is equipped with a Try Me feature. Before using the unit, pull out the plastic Demo Tab located on back panel. Make sure to dispose of tab properly.

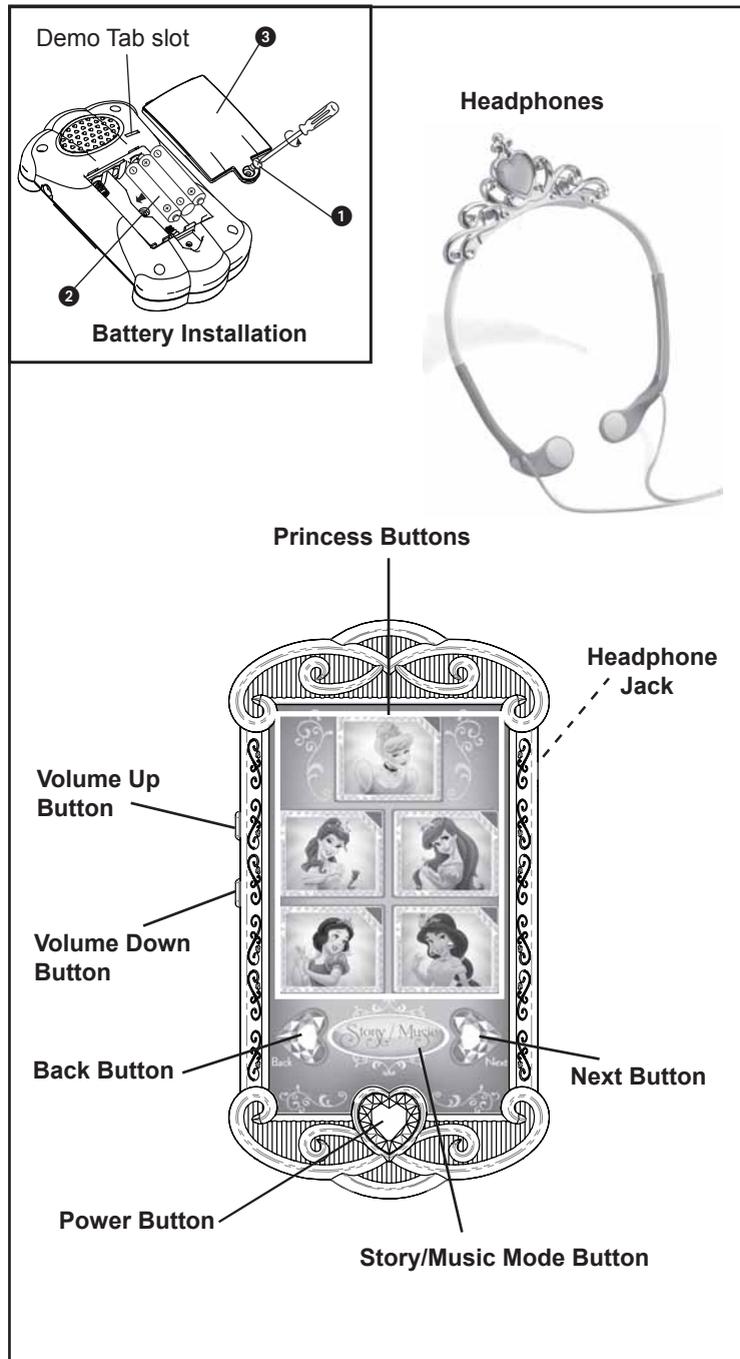

## Turning Power On/Off

- Press the **Power Button** to turn on the Storyteller
- Press **Power Button** again to shut off the unit.

To save battery life, the unit will shut off automatically if no button is pressed after a story or tune plays.

## Playing Stories and Music

The Magical Princess Storyteller lets you listen to stories and music, and to follow the stories with the included storybook.

### CHANGING MODES

Press the **Story/Music Button** to switch back and forth between Story Mode and Music Mode.

### PLAYING STORIES

*Each Princess has a special story.*

- Press a **Princess Button** while in *Story Mode* to listen to a story. You can follow along with the included storybook. To pause the story, press the same button again while it is playing. To unpaue, press the same button again.
- Press the **Next Button** to jump to the next page of a story. Press the **Back Button** to repeat the current page of the story. Press the **Back Button** again to jump to the previous page.

### PLAYING MUSIC

*Each Princess has a special tune.*

- Press a **Princess Button** while in *Music Mode* to listen to music. To pause a tune, press the same button again while it is playing. To unpaue, press the same button again.
- Press the **Next Button** to skip forward in a tune. Press the **Back Button** to skip backward in a tune. Press the **Back Button** again to start the tune over from the beginning.

## Volume Buttons

Press the **Volume Up Button** to increase the volume. Press the **Volume Down Button** to decrease the volume. Please note that there are 10 volume levels. The unit defaults to the middle volume whenever you turn it on.

## Headphones

- Securely plug the included headphones into the Headphone Jack to listen to the stories or music privately through the headphones instead of through the speaker. To adjust fit, pull gently on the arms of the headphones or slide back into place.
- To share the stories and music, make sure the headphones are not connected.

## Troubleshooting

If the unit does not operate properly, this may indicate that the batteries are weak. Insert 3 new AAA (R03) batteries. Make sure batteries are properly installed.

**If problems persist, DO NOT ATTEMPT TO REPAIR THE UNIT. See the Warranty for factory services.**

## Maintenance

It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

## Questions or Comments

- For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**

Also visit our website: [www.kiddesigns.com](http://www.kiddesigns.com)

**If problems persist, please do not attempt to repair unit; see warranty for factory service.**