

## Installing the Batteries

**ATTENTION:** Batteries should only be installed by an adult.

The unit comes with batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries when you get the toy home. A Low Battery icon will appear on the display when batteries need to be replaced.

To replace the batteries:

1. Using a Phillips screwdriver, open the battery compartment door located on the back of the unit.
2. Insert 3 new AA (R6) batteries in the battery compartment. Make sure batteries match the + and - as indicated in the battery compartment diagram.
3. Close battery compartment door. Do not overtighten screw.

 
 
 
 
**WARNING: DO NOT DISPOSE OF BATTERIES WITH HOUSEHOLD TRASH. PLEASE CONSULT LOCAL REGULATIONS FOR PROPER BATTERY DISPOSAL.**

## For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove the rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be charged under adult supervision.
- Only batteries of the same or equivalent type recommended are to be used.

## Unpacking and Set Up

The Unit has a demo tab for in-store demonstration purposes. Make sure to remove this tab. To do so, gently pull on tab. Dispose of tab properly. Remove the clear protective film from the clock display.

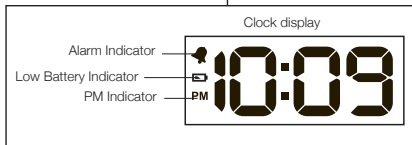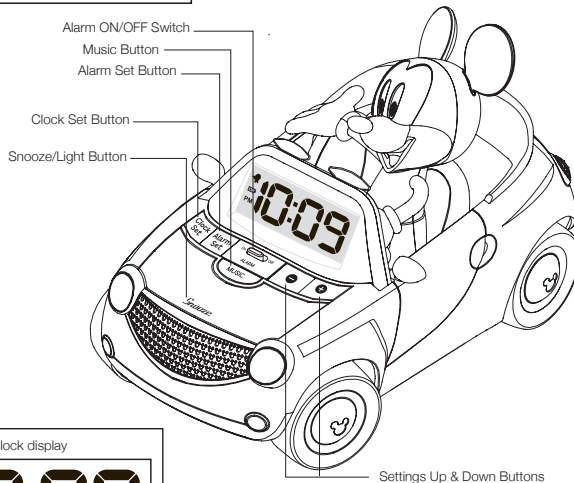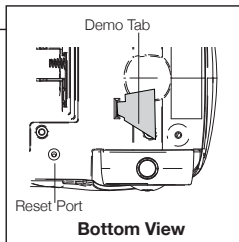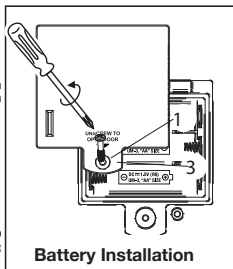


## Setting The Time

- Press and hold the **Time Set Button** until the display flashes.
- Press the **⊖** or **⊕** **Button** to adjust the clock to the current time (hold to set more rapidly). Make sure to set the correct AM or PM time. The PM indicator appears to the lower left of the time display; there is no AM indicator.
- Press the **Time Set Button** to confirm time setting.

## Setting the Alarm

Set the **Alarm On/Off Switch** to "ON" to wake up to sound effects, music and Mickey's voice, and set to "OFF" to disable the alarm.

- Press and hold the **Alarm Set Button** until the display flashes.
- Press the **⊖** or **⊕** **Button** to adjust the display to the desired alarm time (hold to set more rapidly). Make sure to set the correct AM or PM time. The PM indicator appears to the lower left of the time display; there is no AM indicator.
- Alarm is active when the  icon appears on the display.
- Press the **Alarm Set Button** to confirm alarm setting.

## Snooze, Display Light and Alarm Reset

Press down on the **Snooze Button** when the alarm sounds to snooze the alarm for about 9 minutes. After this, the alarm will sound again. You can press the **Snooze Button** several times during the duration of the alarm (about an hour).

Pressing the **Snooze Button** when the alarm is not sounding will turn on the display backlight briefly.

Press the **Alarm Set Button** to stop a sounding alarm and reset it to come on the next day at the same time.

## Music Button

Press the **Music Button** to listen to music with Mickey Mouse. Press the **Music Button** again to listen to the next Mickey Mouse song. Press the **Music Button** again to exit and turn off the sound.

## Troubleshooting

- If you experience improper operation, try inserting a paper clip or similar into the Reset port located on the bottom of the unit.
- If the unit does not work at all, check the batteries. They are most likely weak and need to be replaced with 3 brand new "AA" batteries. If the unit still does not work after changing the batteries, then take them out and make sure you have installed them properly.
- If there is a distorted or fuzzy sound the batteries are weak. Once again, replace them with new alkaline batteries.
- If improper operation continues, momentarily remove then install batteries, while making sure that you have installed them correctly.
- If the trouble persists, DO NOT ATTEMPT TO REPAIR THE UNIT. See warranty for factory services.

## FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Mickey Mouse Clubhouse Main Title  
Words and Music by John Flansburgh and John Linnell  
© 2006 Wonderland Music Company, Inc. (BMI)  
All Rights Reserved.

Hot Dog!  
Words and Music by John Flansburgh and John Linnell  
© 2006 Wonderland Music Company, Inc. (BMI)  
All Rights Reserved.

## Maintenance

It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

## Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOY-TOYS**. Please also visit our website: **www.kiddesigns.com**.

## One-Year Limited Warranty Information

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$6.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$6.00.
4. Send the unit prepaid to the Factory Service Center listed below.

**NOTE:** This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets; or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

 
Send unit to:  
**Consumer Repair Department**  
**KIDdesigns, Inc. 1330 Goodyear Dr.**  
**El Paso, TX 79936-6420**

©2012 Disney Visit the Disney website at [DisneyJunior.com](http://DisneyJunior.com)  
Manufactured and Distributed by KIDdesigns, Inc.  
Rahway, NJ 07065-5024



Model MK-320

## Rockin' Ride Alarm Clock

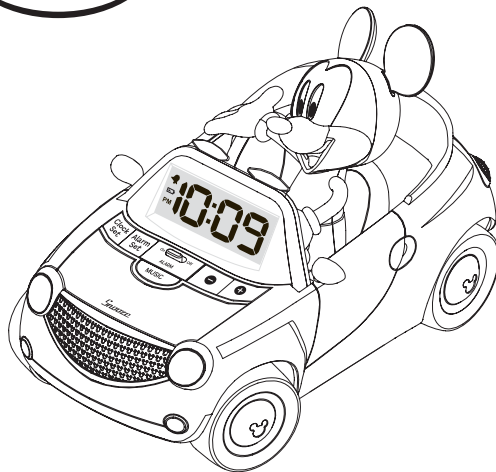

### Important Message to Consumers

Thank you for purchasing one of Disney's top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you understand the safe and proper way to use this product, and to help give it the long-lasting life that Disney's products are designed for.

**Keep these instructions for future reference as they contain important information.**