

### Activating Voice Control

When the unit is connected to a Bluetooth device, you can access Siri or Google Assistant using voice commands by pressing and holding the Voice Control Button for 2 seconds. **This special feature is disabled on the unit when shipped, and requires parental consent to be activated.**

To start the one-time activation process, download the free "Voice Control Set Up" app on your smartphone using the App Store or Google Play.

Once downloaded and installed on your smartphone, the app will provide prompts to help you set up the Voice Control function.

### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
CAN ICES-3 (B)/NMB-3(B)

### Maintenance

It is important to keep the unit as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

If the unit is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

### ON/OFF/DEMO Switch

The unit is equipped with a Demo Switch for in-store demonstration purposes. Before using the unit, slide the switch to the ON position.

### Questions or Comments

For questions or comments regarding this or other eKids products, please call our toll-free number: 1-888-TOP-TOYS.

Please also visit our website: [www.ekids.com](http://www.ekids.com)

### Limited One-Year Warranty

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

#### Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.


This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

© 2019 eKids, LLC  
Questions? Visit [www.ekids.com](http://www.ekids.com)  
For any other questions: 1-888-TOP-TOYS Toll Free  
1299 Main Street Rahway NJ 07065



CHARGE  
BEFORE  
USE

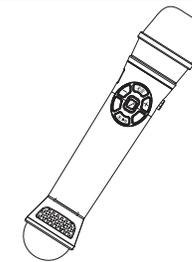

Model: B23

Bluetooth Karaoke  
Microphone  
with Light Show




### Important Message to Customers

Thank you for purchasing one of our many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.

### Charging the Microphone

The microphone has a built-in rechargeable battery. Before use:

1. Connect the included micro USB cord to the micro USB charging port on the left of the unit.
2. Connect the standard USB plug end of the cord to a power USB port on a computer or other USB charging device. For first time use, charge unit for about 5 hours.

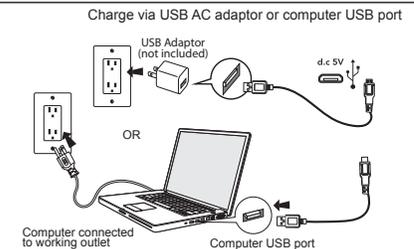

### Playing with the Microphone

#### ON/OFF/DEMO Switch

Slide the **ON/OFF/DEMO Switch** to the ON position to play!

#### Microphone ON/OFF Switch

Slide the **Mic ON/OFF Switch** to the ON position to sing!

#### Bluetooth Pairing

- Stream music from your Bluetooth device! Make sure your device is in Bluetooth mode to begin pairing.
- When the ON/OFF/DEMO Switch is in the ON position, the microphone will automatically enter pairing mode.
- Select "Karaoke B23" from your Bluetooth device's menu to connect. Press and hold the **Light Show/Bluetooth Pairing Button** to pair a new device.
- Control your music and navigate tracks using the **Play/Pause**, **Next Track** (press and hold), and **Previous Track** (press and hold) buttons on the microphone. Adjust the music volume on your Bluetooth device.

#### Voice Control (App required to activate - see reverse)

- Request songs on your Bluetooth device via voice commands!
- Press and hold the **Play/Pause/Voice Control Button** to activate Siri or Google Assistant.

#### Echo Effects + Sound Effects

- Press the **Sound Effects Button** to add fun SFX to the music!
- Press the **Echo Effects Button** to add cool vocal effects!

#### Party Lights

- Press the **Light Show/Bluetooth Pairing Button** to activate party lights!

