

FCC Information

FCC ID: EMO677
IC: 98B-677

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement CAN ICES-3 (B)/NMB-3(B)
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

Battery Use Cautions & Tips

- For Safety & Best Performance:** (Proper use and care of product)
- Only use the recommended/supplied batteries or equivalent.
 - Use alkaline batteries for longer life.
 - Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
 - Insert batteries with proper polarity (+/-) as indicated.
 - Remove exhausted batteries from product.
 - Recharge rechargeable batteries under adult supervision.
 - Do not attempt to recharge non-rechargeable batteries.
 - Do not open batteries or heat them beyond normal ambient temperatures.
 - To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
 - Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
 - Store in cool, dry, ventilated area away from hazardous or combustible material.
 - Do not dispose of batteries in the household trash or fire.
 - Follow applicable laws and local regulations for the disposal and transportation of batteries.
- Cleaning** – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.

Parents: Examine your unit periodically for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the product should not be used until properly repaired.

Troubleshooting

If the unit is experiencing a fuzzy or distorted sound, check the batteries. They are most likely weak and need to be replaced with a brand new 'C' batteries.

IMPORTANT SAFETY INSTRUCTIONS

- Please heed all warning, read and follow all instructions and keep these instructions handy for future reference.
- Do not use this product near water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Heat – This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this product during lightning storms or when unused for long periods of time.
- Damage Requiring Service – This product should be serviced by qualified service personnel when:
 - Plug has been damaged or the unit has been exposed to rain.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.
- Attention should be drawn to the environmental aspects of battery disposal!
- No naked flame sources, such as lighted candles, should be placed on this product.
- This product is suitable for use in tropical and/or moderate climates.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

Questions or Comments

For questions or comments regarding this or other eKids products, please call our toll-free number: **1-888-TOP-TOYS**
Please also visit our website: www.eKids.com

Limited One Year Warranty

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-888-TOP-TOYS (867-8697) to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty
NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover: (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

© 2019 eKids LLC.
Questions? Visit www.eKids.com
or call 1-888-TOP-TOYS
1299 Main Street, Rahway, NJ 07065

Printed in China ©Disney 677_041519-B



Important Message to Customers

Thank you for purchasing one of our many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.
Keep these instructions for future reference as they contain important information.

CAUTION-ELECTRICALLY OPERATED PRODUCT

NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. AC 100-240V, 50-60Hz 0.5 A UL LISTED.

What's Included:



Karaoke Player



1 Microphone



AC/DC Adapter




RCA Cable

Installing the Batteries

Note: Batteries should always be installed by an adult.

1. Open the battery compartment door located on the back of the unit.
2. Insert 8 new C batteries in the battery compartment. Make sure batteries match the + and - as indicated in the battery compartment diagram.
3. Replace battery compartment door.



Using AC Power

This unit also works on AC Power. An adult should plug the small end of the power adapter (included) into the DC-IN jack on the back of the unit, and plug the power adapter into the household AC outlet.

Using the Microphone

Connect the included microphone to one of the input jacks on the back of the unit. Turn on the unit and choose USB, Bluetooth, AUX, or CDG modes using the Mode Button.

- Slide the switch on the Microphone to ON. Now you can sing along to your favorite music in either CD, Bluetooth, or AUX modes, and hear your voice through the speaker!
- When not in use, slide the Microphone switch to OFF. Unlock the removable slots on the side of the unit to store your microphone, as shown in the image on the right.

CDG Mode

This unit plays CD, CDR, and CDG formats. To play a CD or CDR, turn on the unit and set the Mode Selector to CDG.

- Open the disc compartment on the front of the unit and insert the disc face up. Close the compartment door.
- Use the controls to play/pause, stop, or navigate tracks.

The RCA cable should be installed by an adult. To play a CDG disc on your television:

- Connect the included RCA cable (white and red connectors) to the RCA audio output jacks located at rear of the unit.
- Connect the other end of the audio cable to the RCA audio input jack of a TV set.
- Connect the RCA video cable (yellow connector) to the RCA video output jack located at rear of the unit.
- Connect the other end of the video cable to the RCA video input jack of a TV set, and make sure your television is set to the corresponding input.
- Turn on the unit and set the Mode Selector to CDG.
- Insert a CDG disc into the unit and press the Play/Pause Button. Now you can follow the lyrics on the screen and sing along through the microphone!
- Use the Previous Track and Next Track buttons to navigate tracks on the CDG.

Repeat/Program Buttons

To repeat a track on your CD, press the Repeat Button on the unit. The "Repeat" LED indicator will blink. Press again, the "repeat" LED indicator will glow solid, and the unit will repeat all tracks. Press again to cancel the "repeat all" program.

You can also program up to 20 tracks of the CD in a desired order. With CD playback stopped, press the Program Button once. The "PROG" LED indicator blinks, and the LED display shows the program number.

Press the Previous Track and Next Track Buttons to select a track number. When the desired track number is displayed, press the Program Button to confirm entry.

Repeat these steps until all desired tracks are entered. To begin programmed playback, press the Play/Pause Button. To cancel programmed playback, press the STOP button twice.


- | | | | |
|-------------------------|-----------------------|--------------------------|---|
| 1. Mic Volume Rotary | 9. Previous Track | 17. Play/Pause Button | 25. AUX-IN Jack |
| 2. Echo Effect Rotary | 10. Stop Button | 18. Next Track Button | 26. Microphone Jacks |
| 3. LED Power Indicator | 11. Mode Selector | 19. CD Compartment | 27. USB Port |
| 4. Power ON/OFF | 12. Light Button | 20. Microphone | 28. Phone Stand - Not Recommended for Use with Tablets |
| 5. Voice Control Mic | 13. 10+Folder+ | 21. Light Show LEDs | |
| 6. Voice Control Mic | 14. Bluetooth Pairing | 22. LED Display | |
| 7. Auto Voice Control | 15. Repeat Button | 23. DC Power Jack | |
| 8. Master Volume Rotary | 16. Program Button | 24. RCA Audio/Video Jack | |



Using The Light Button:

By default, the unit will display a repeating light pattern when no music is playing. When music plays, the unit will activate 'beat detection', and lights will pulse along to music.

- Press to play repeating Light pattern
- Press again to turn light off
- Press again to return to default setting

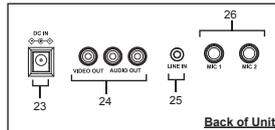

Pairing Your Device Via Bluetooth

Turn on your Bluetooth device and turn on Bluetooth mode (check in Options or Settings).

- Turn on the unit and set the Mode Button to BT mode. Press and hold the Bluetooth Pairing Button for 2 seconds. A tone will sound and the LED screen will flash 'bt' as the speaker enters pairing mode.
- "Karaoke 677" should appear on your device's screen. Select "Karaoke 677" to connect.
- Once paired, a confirmation tone will sound and 'bt' will glow solid on the LED screen. Put your Bluetooth device in Play mode to stream audio to the speaker. Use your Bluetooth device OR the Play/Pause, Previous Track, and Next Track buttons on the unit to control audio functions.

Voice Control Button / Voice Control App

When the unit is in BT mode, you can access Siri or Google Assistant using voice commands by pressing and holding the Voice Control Button. This special feature is disabled on the unit when shipped, and requires parental consent to be activated. To start the one-time activation process, download the free "Voice Control Set Up" app on your smartphone using the App Store or Google Play. Once downloaded and installed on your smartphone, the app will provide prompts to help you set up the Voice Control function.

USB Mode

- Connect a USB flash drive to the USB port.
- Make sure the Mode Button is set to USB.
- When a USB drive is detected, the number of files on the USB drive will appear on the LCD display.
- Use the "Forward" and "Reverse" buttons to advance through the numbers of files on the USB drive.
- After pressing "Play", the automatic play-all function will activate, and songs will play in the order they were stored.
- Press the "10+Folder+" button to jump ahead 10 files. Press and hold to jump ahead to the next folder on your USB drive.

AUX Mode

To connect and amplify other audio sources (MP3 players, etc):

- Turn on the unit and set the Mode Button to AUX. "AU" will glow solid on the LED screen.
- Connect one end of a 3.5mm audio cable (not included) into the AUX-IN jack and the other end to the headphone jack of your audio device.
- Control/navigate tracks from your audio device.

Vocal Effects

Add vocal effects while you sing! Make sure your microphone is connected to the unit and is turned ON.

Auto Voice Control Dial (For Multiplex CDG discs only):

When playing a Multiplex recording, spin the dial to replace the lead singer's voice with your own!

Echo Effect Rotary Dial:

Spin the dial as you sing to add an echo effect to your voice!